

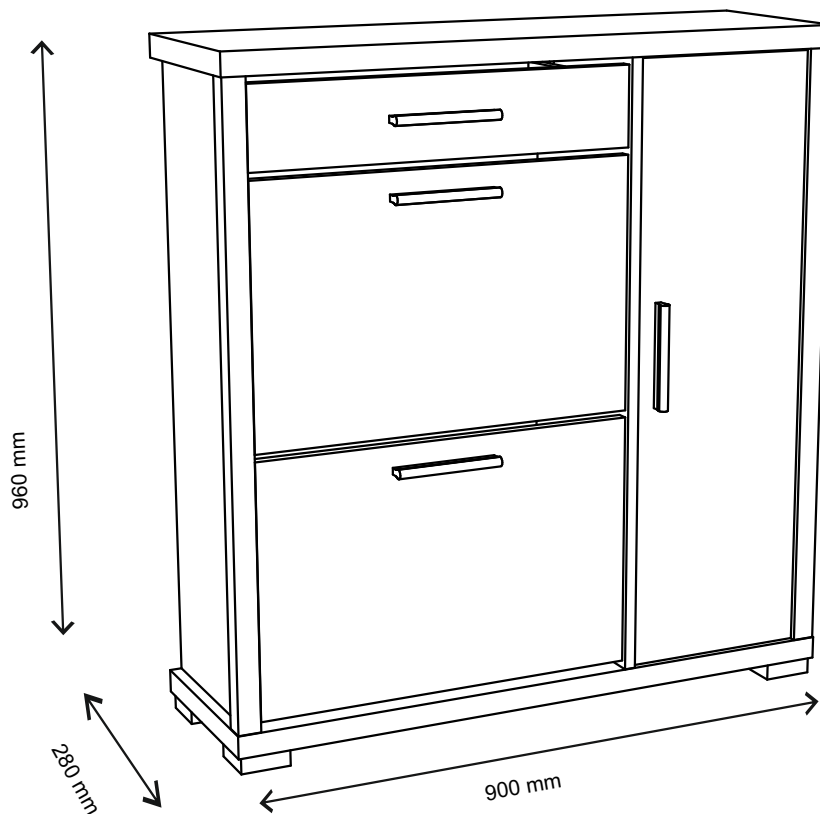
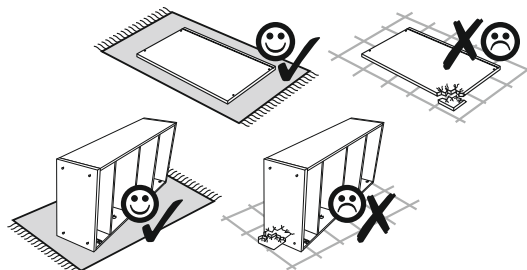


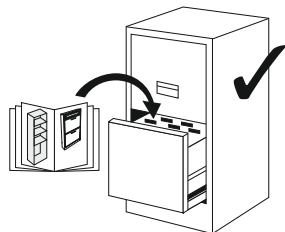


Instalation manual

LORA: KOM_1D1S2K

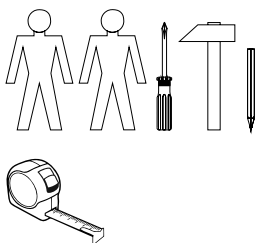

14x r16	12x s2	1x y1	1x z1	2x e1	34x p1
4x p25	8x p9	2x a1	2x b1	14x r1	1x L 250
4x J1	4x k150	2x m9	2x m9	8x p6	
4x c235	8x d1	4x e2	16x f1	50x l1	



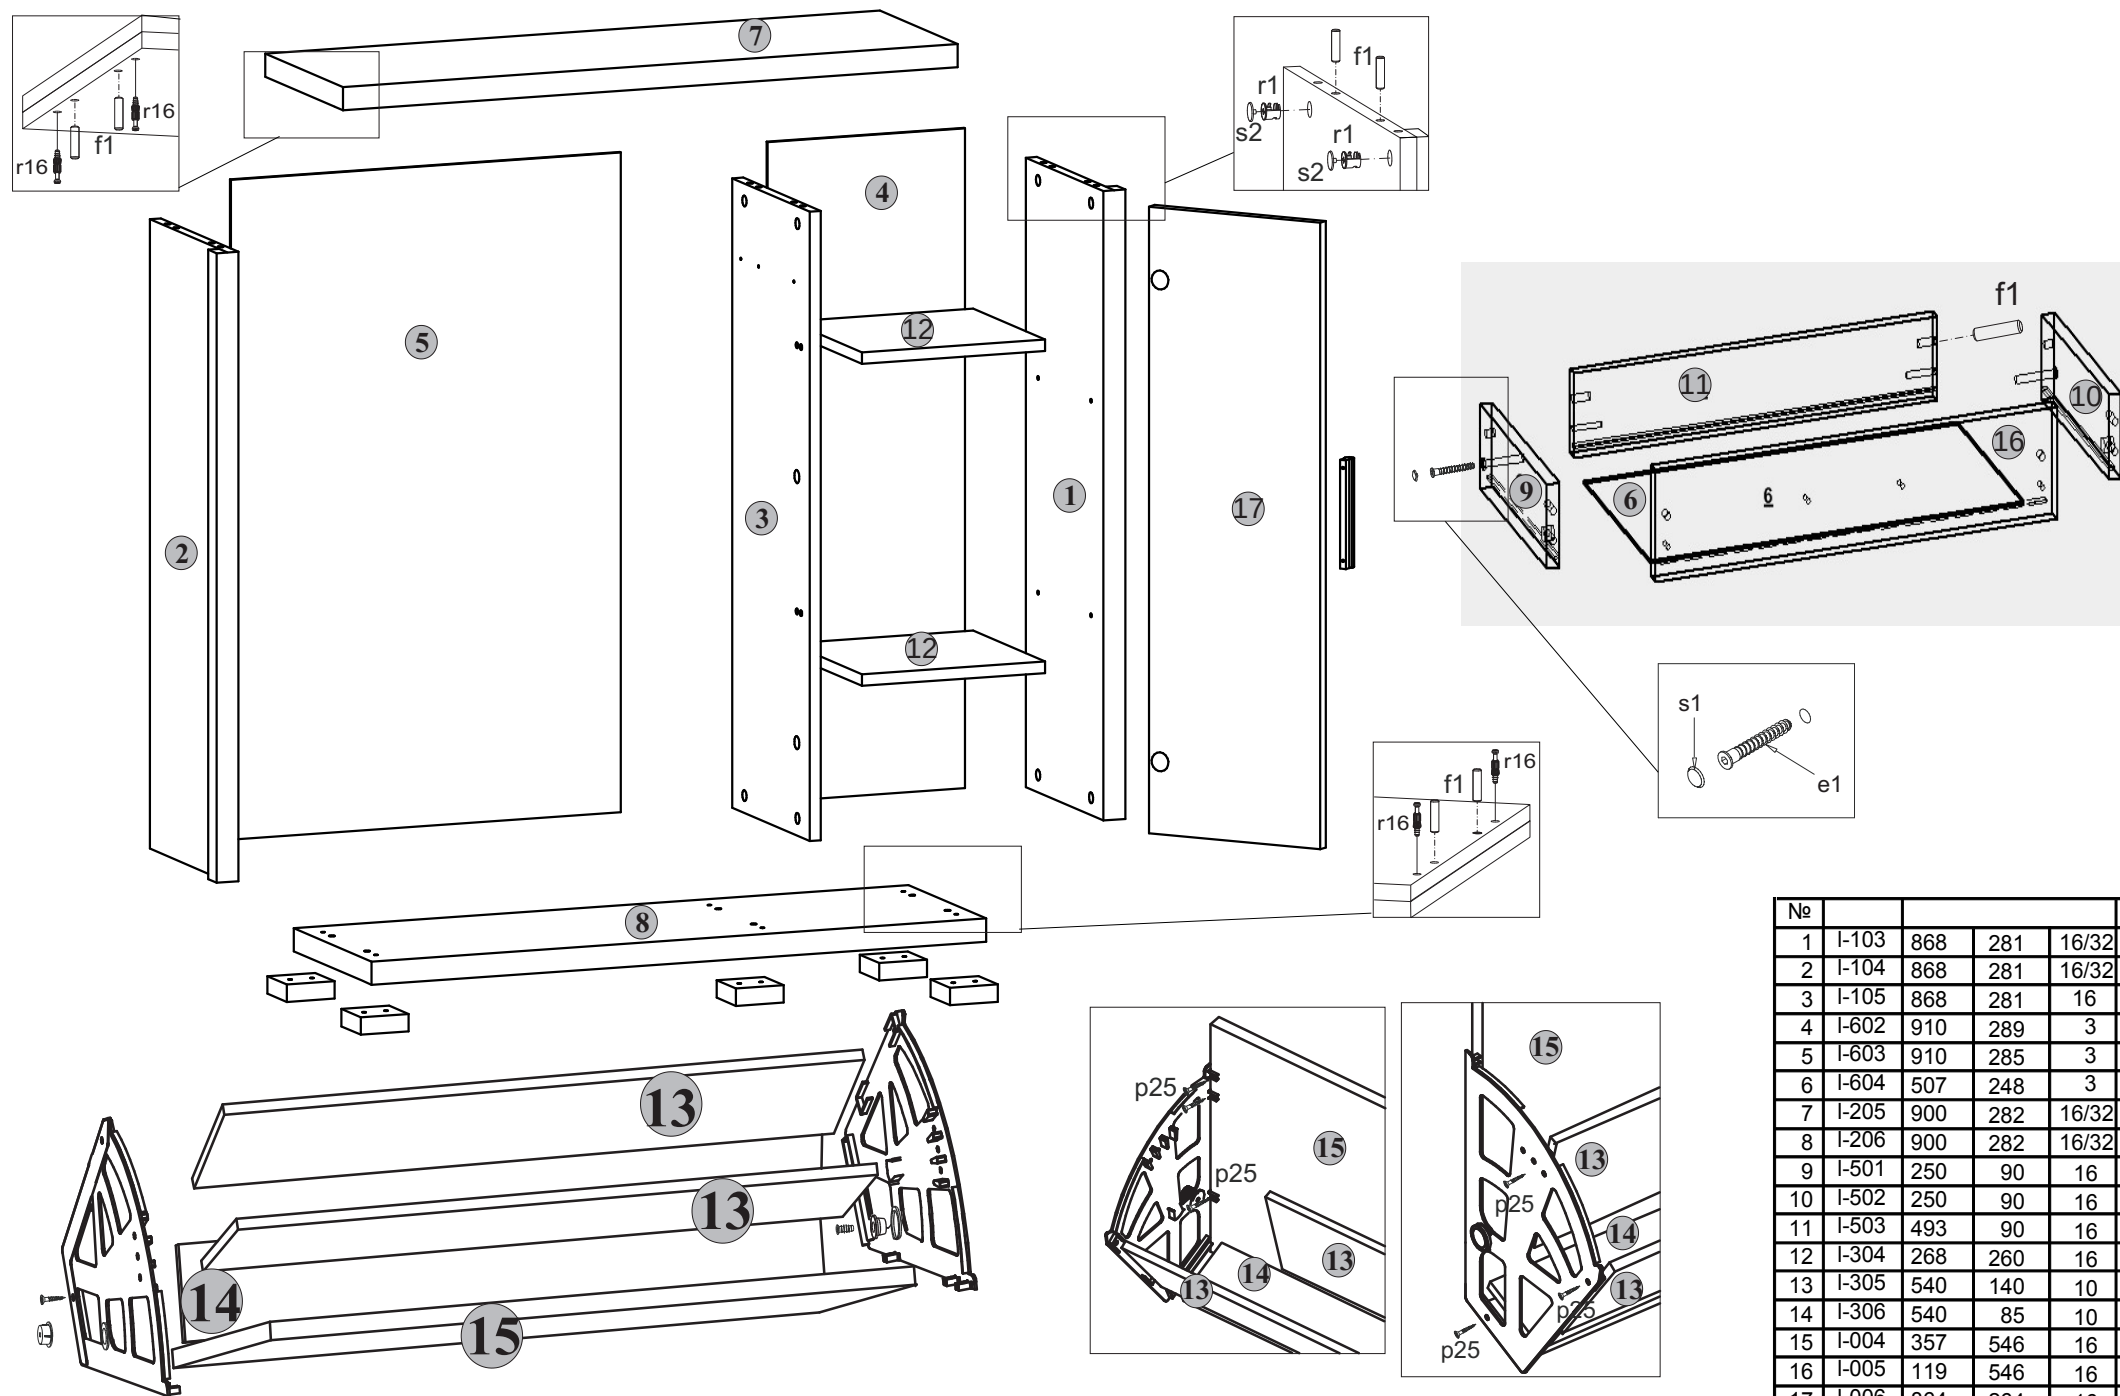

№					
1	I-103	868	281	16/32	1
2	I-104	868	281	16/32	1
3	I-105	868	281	16	1
4	I-602	910	289	3	1
5	I-603	910	285	3	2
6	I-604	507	248	3	1
7	I-205	900	282	16/32	1
8	I-206	900	282	16/32	1
9	I-501	250	90	16	1
10	I-502	250	90	16	1
11	I-503	493	90	16	1
12	I-304	268	260	16	2
13	I-305	540	140	10	4
14	I-306	540	85	10	2
15	I-004	357	546	16	2
16	I-005	119	546	16	1
17	I-006	864	264	16	1