
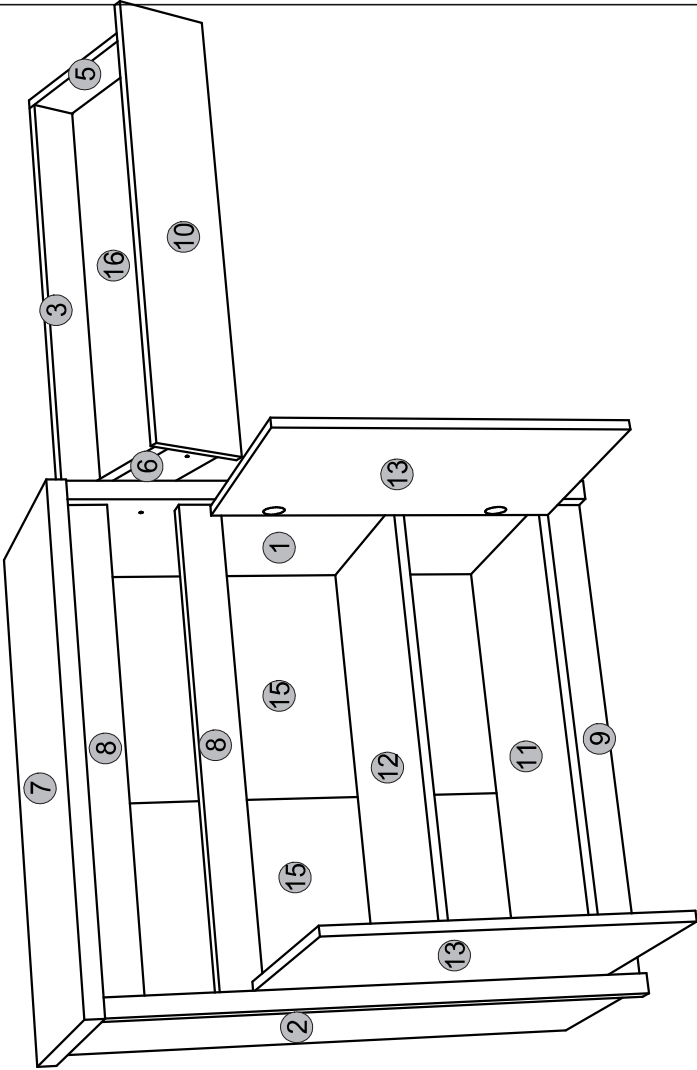
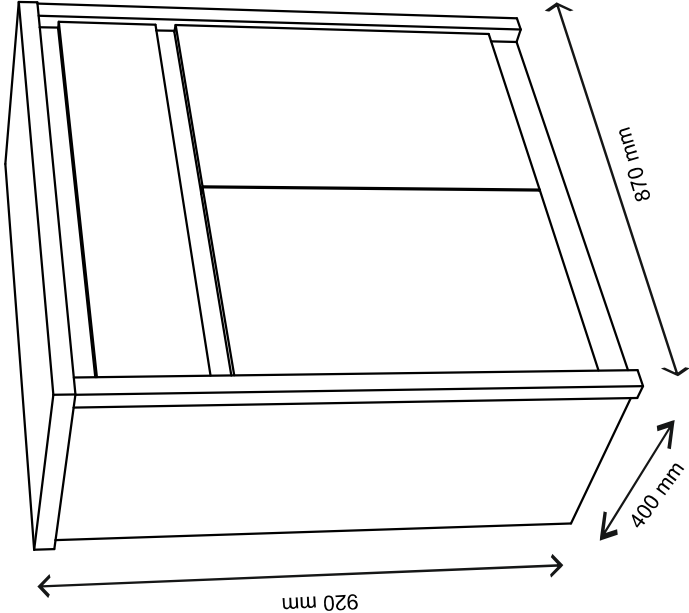
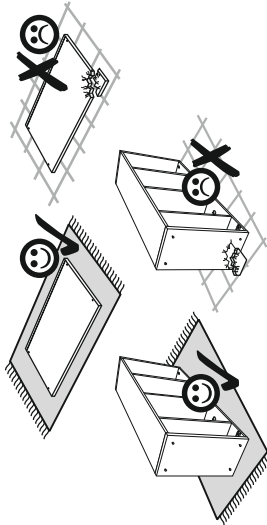
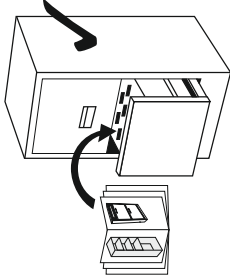
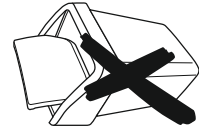
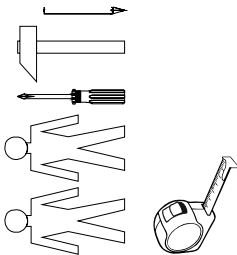
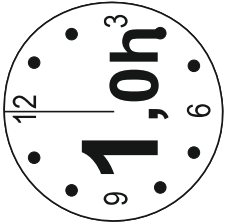


Installation manual

NORTON: KOM_2D1S

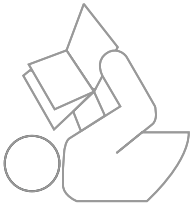


Element symbol	Dimensions			Code	Package
1	884	398	16/32	1 K-113	1/1
2	884	398	16/32	1 K-114	1/1
3	747	100	16	1 K-505	1/1
4	747	100	16	1 K-506	1/1
5	350	100	16	1 K-507	1/1
6	350	100	16	1 K-508	1/1
7	870	400	16/32/32	1 K-204	1/1
8	804	70	30	2 K-404	1/1
9	804	60	16	1 K-405	1/1
10	170	798	16	1 K-003	2/2
11	804	369	16	1 K-307	1/1
12	804	365	16	1 K-308	1/1
13	582	398	16	2 K-004	2/2
14	318	60	16	1 K-406	1/1
15	849	410	3	2 K-605	1/1
16	761	332	3	1 K-606	1/1


24x Ø630 mm f1	20x Ø630 mm p25	4x Ø143 k1	4x Ø143 b119	4x Ø143 b119	10x Ø143 r1	10x Ø143 r16	10x Ø143 s2	1x Ø143 z1
60x Ø143 l1	60x Ø143 et	6x Ø143 s1	6x Ø143 s1	6x Ø143 s1	6x Ø143 s1	6x Ø143 s1	6x Ø143 s1	4x Ø143 d1




1

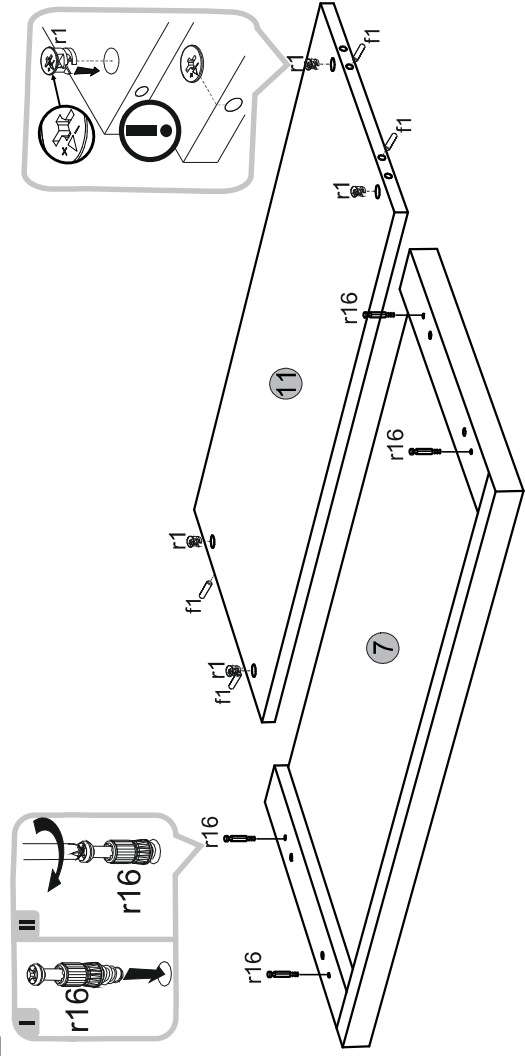


3

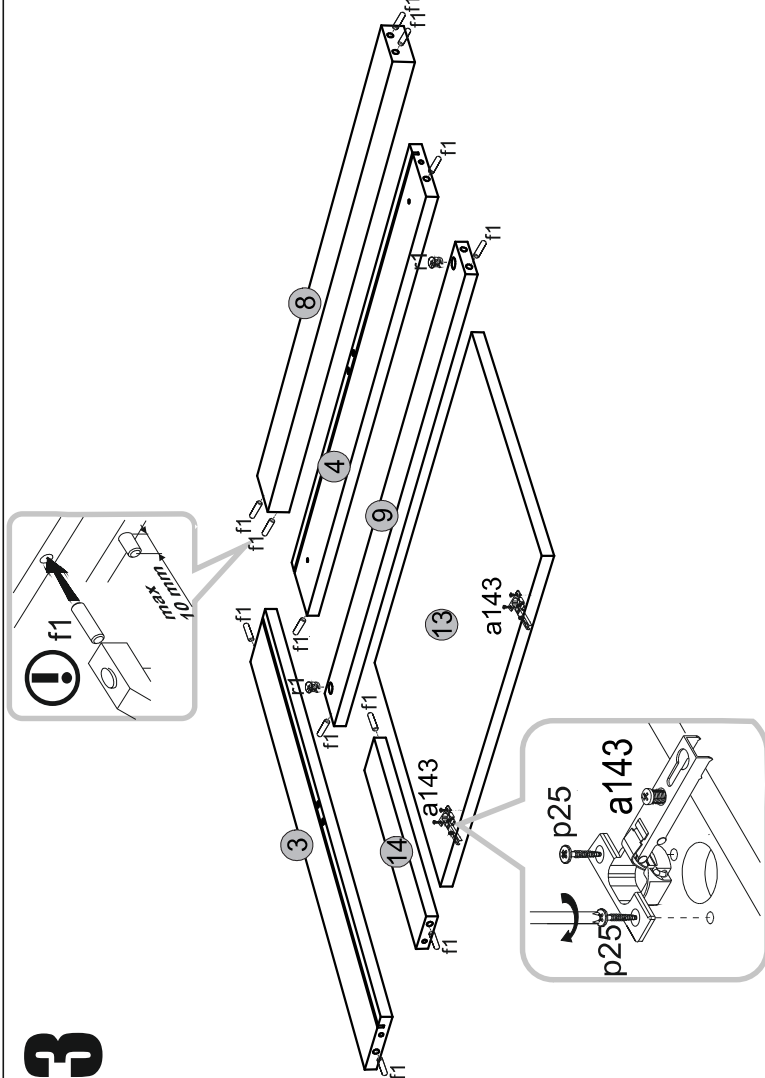


2

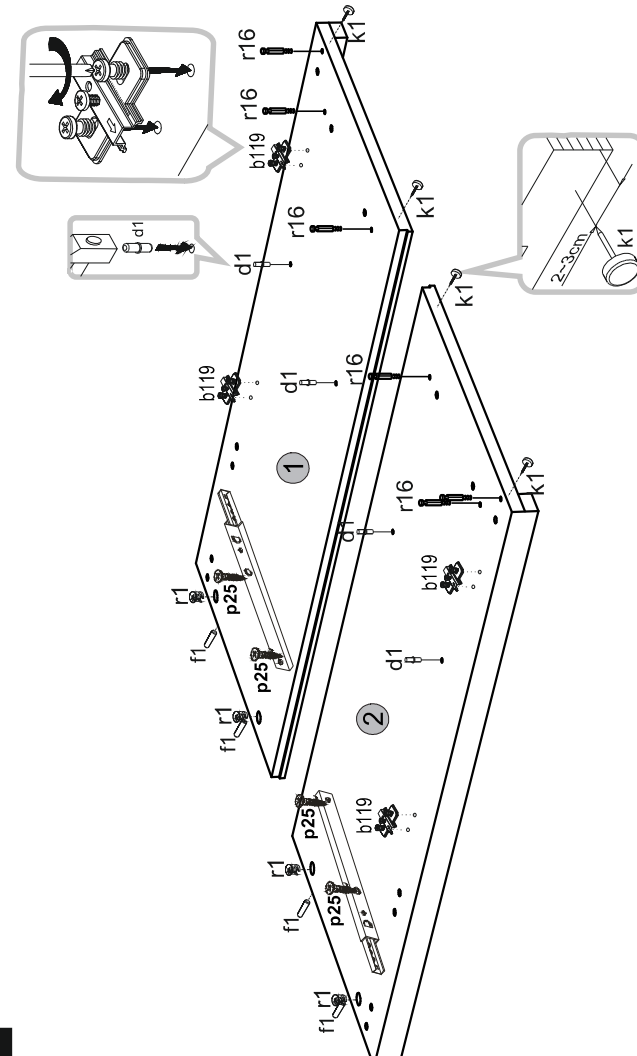


4

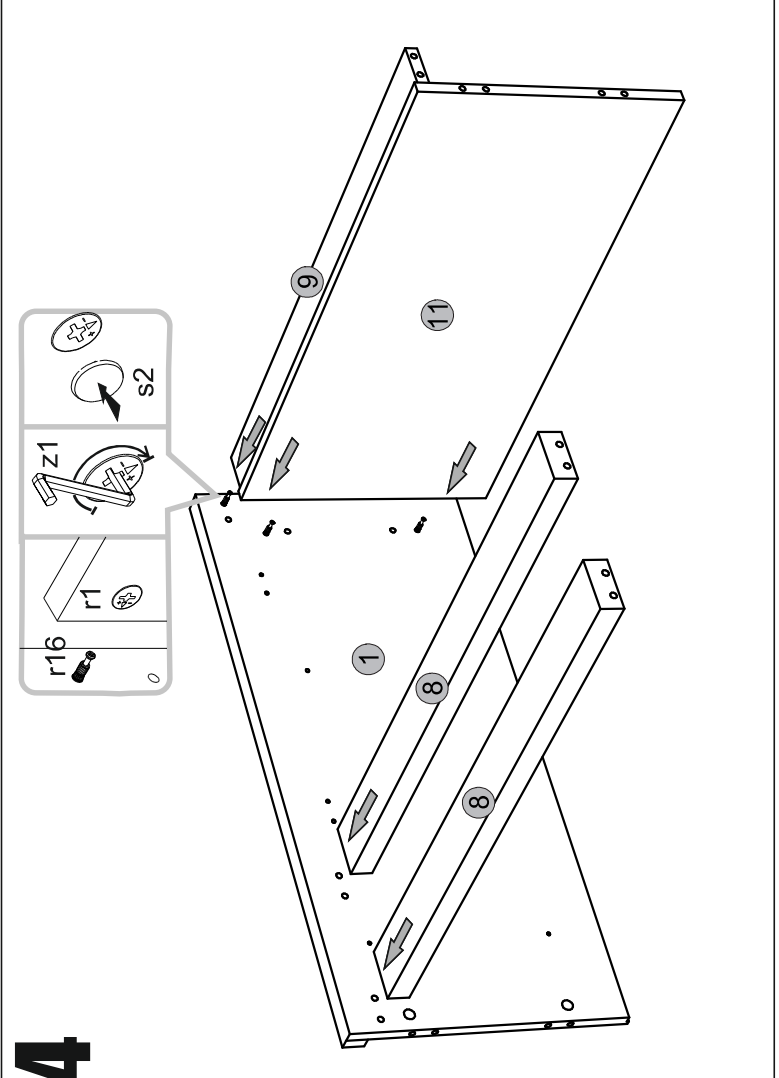

5

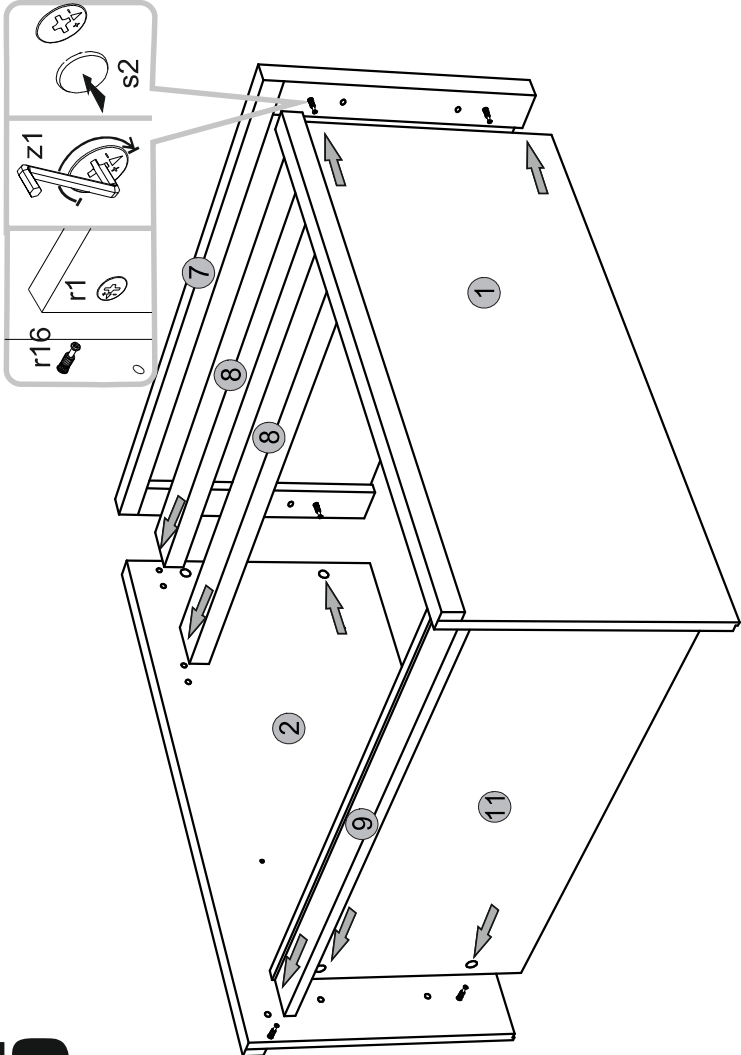

7

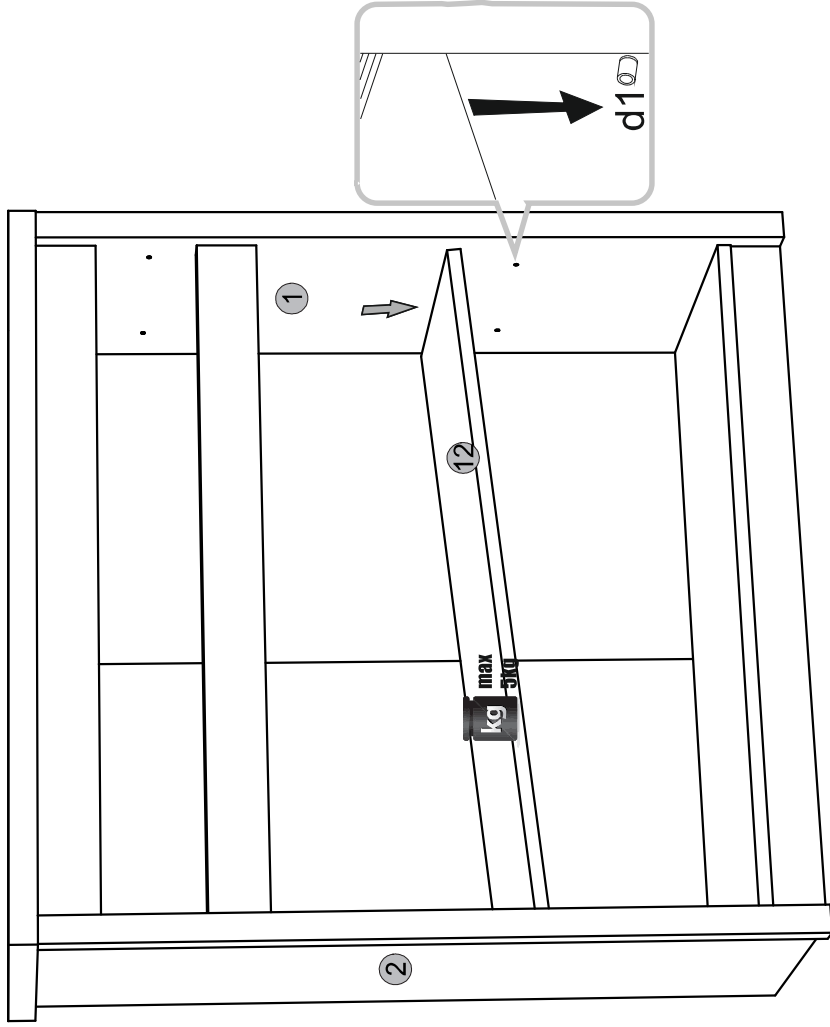

6

