

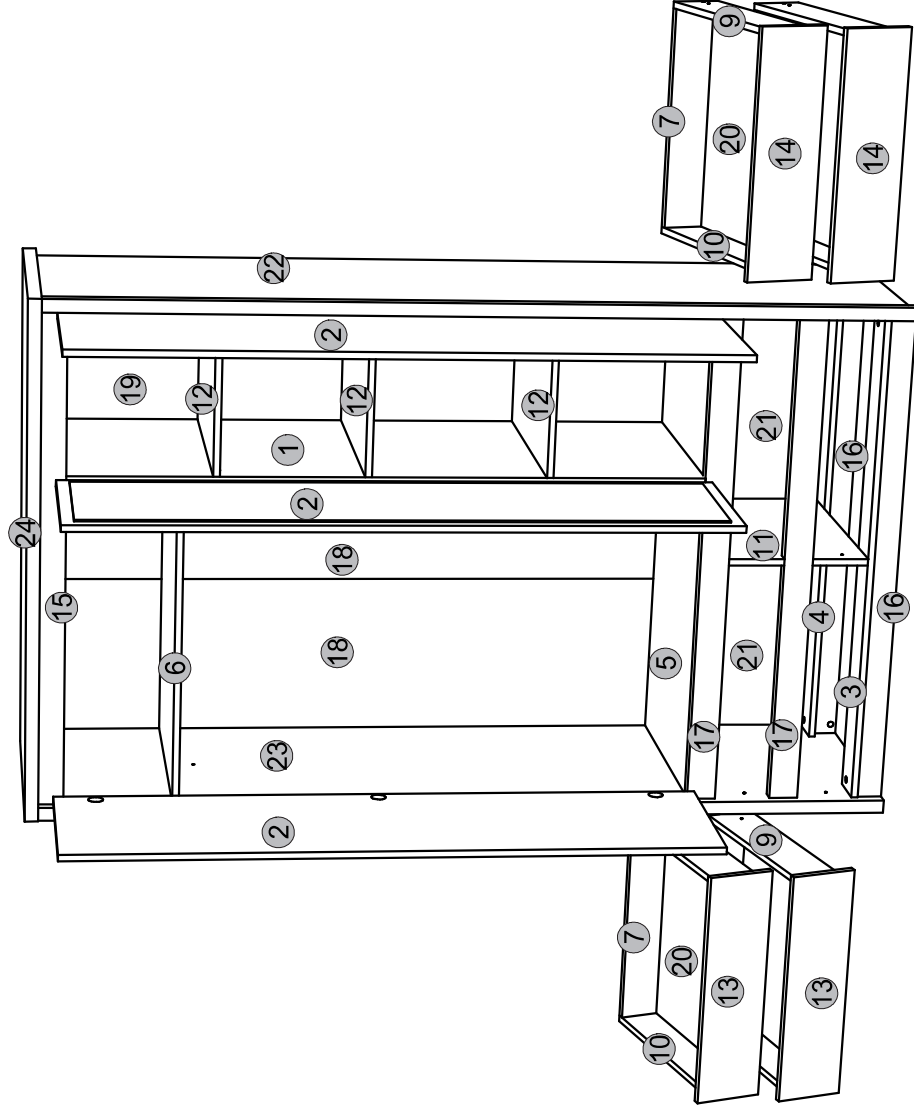
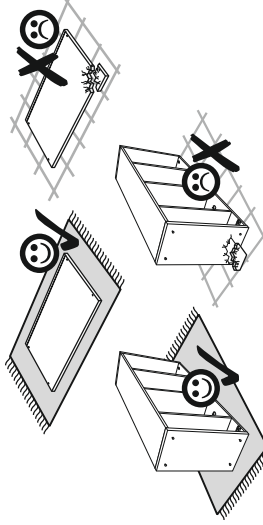
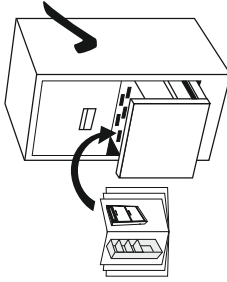
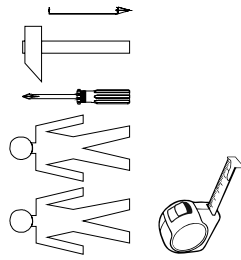
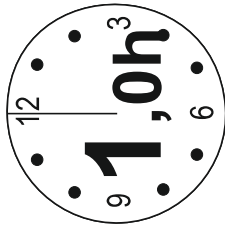
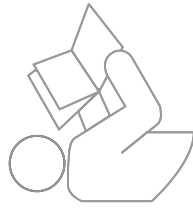



Instalation manual	
NORTON:	SZF_3D4S


NORTON: SZF_3D4S

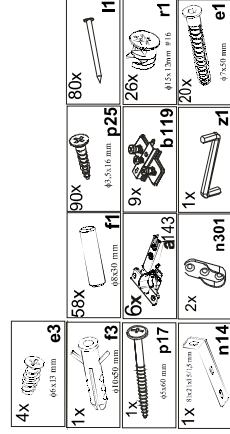


Element symbol	Dimensions			Code	Package
1	1596	569	16	1 NS-107	1/1
2	1560	398	16	3 NS-002	4/4
3	1204	100	16	1 NS-403	3/3
4	1204	100	16	1 NS-404	3/3
5	1204	539	16	1 NS-302	3/3
6	794	569	16	1 NS-303	3/3
7	537	120	16	4 NS-505	2/2
8	537	120	16	4 NS-506	2/2
9	500	120	16	4 NS-507	3/3
10	500	120	16	4 NS-508	2/2 3/3
11	396	569	16	1 NS-108	1/1
12	394	569	16	3 NS-304	2/2 3/3
13	170	598	16	2 NS-003	4/4
14	170	598	16	2 NS-004	4/4
15	60	1204	16	1 NS-405	2/2
16	60	1204	16	2 NS-406	3/3
17	70	1204	30	2 NS-407	3/3
18	1613	405	3	2 NS-603	1/1
19	1613	411	3	1 NS-604	1/1
20	551	482	3	4 NS-605	2/2
21	419	611	3	2 NS-606	2/2
22	2068	598	16/32	1 NS-109	1/1
23	2068	598	16/32	1 NS-110	1/1
24	1270	600	16/32	1 NS-202	2/2

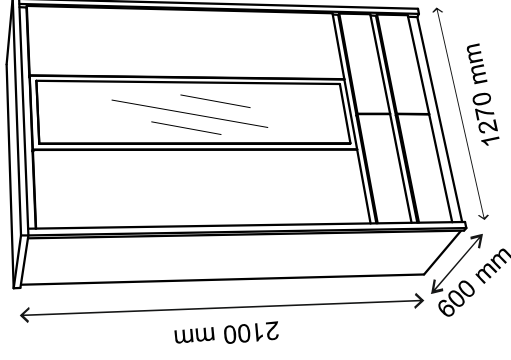


1

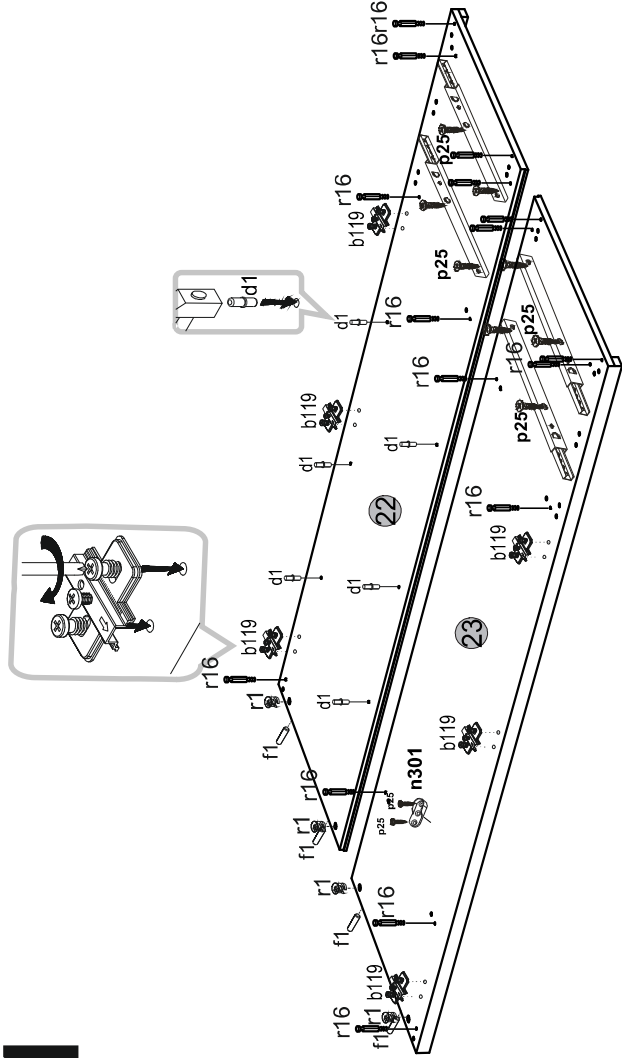


3

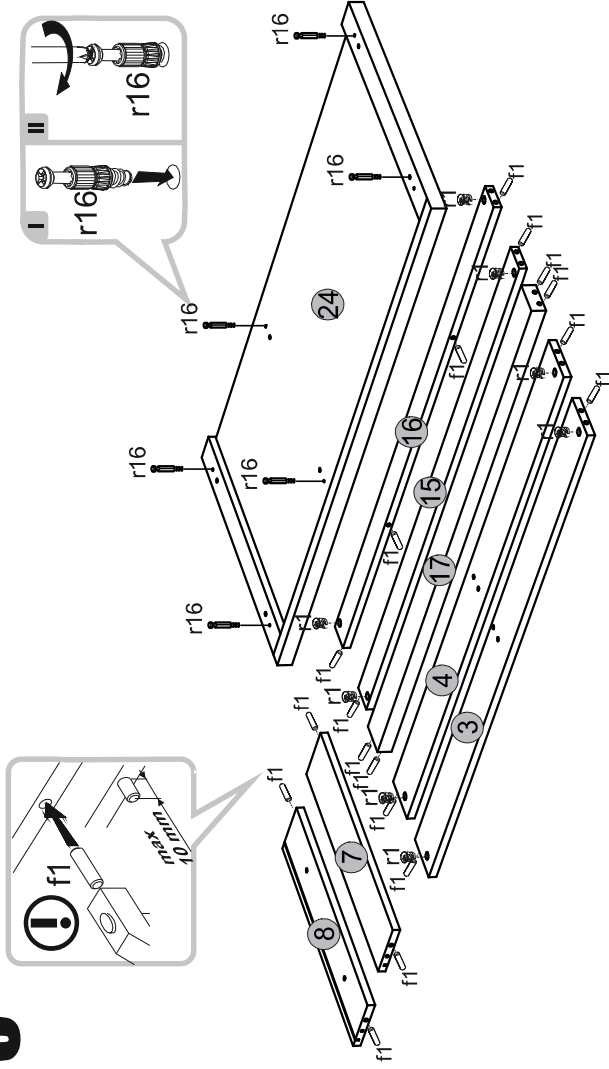


2

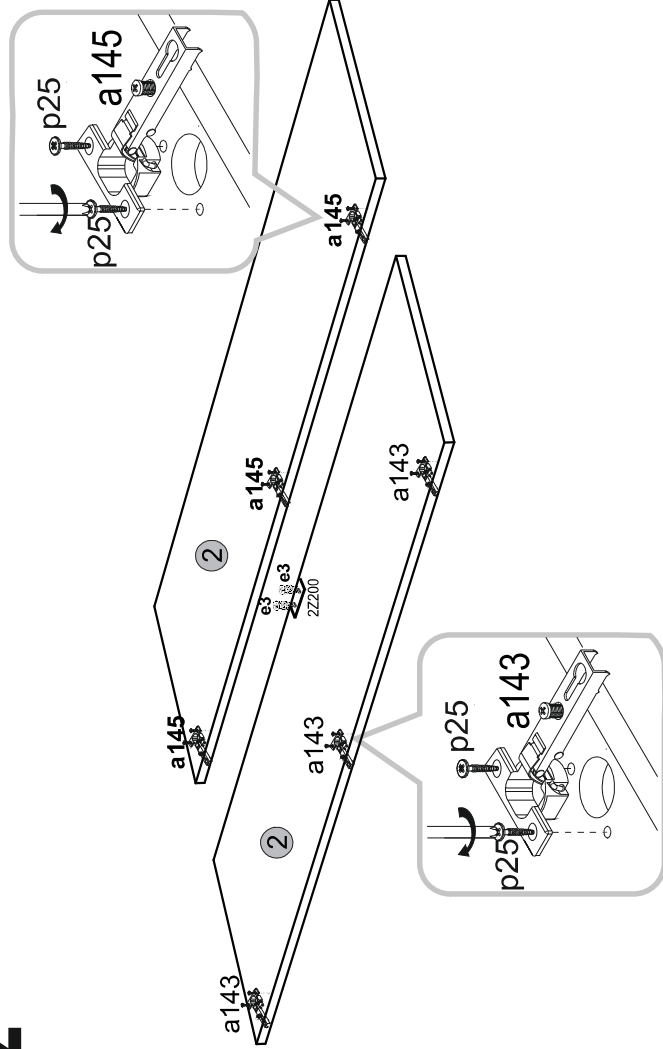


4

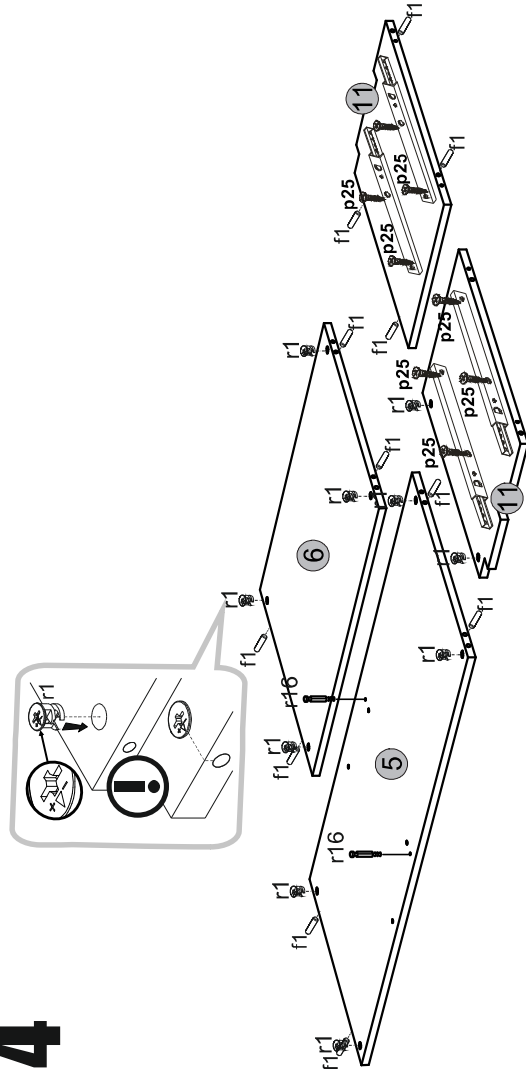


5

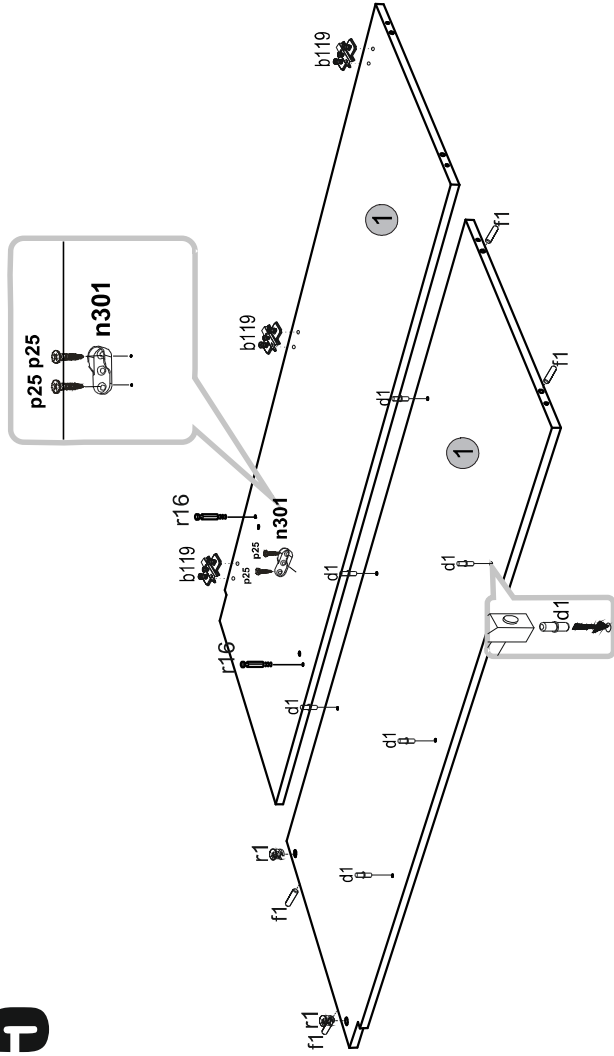


7

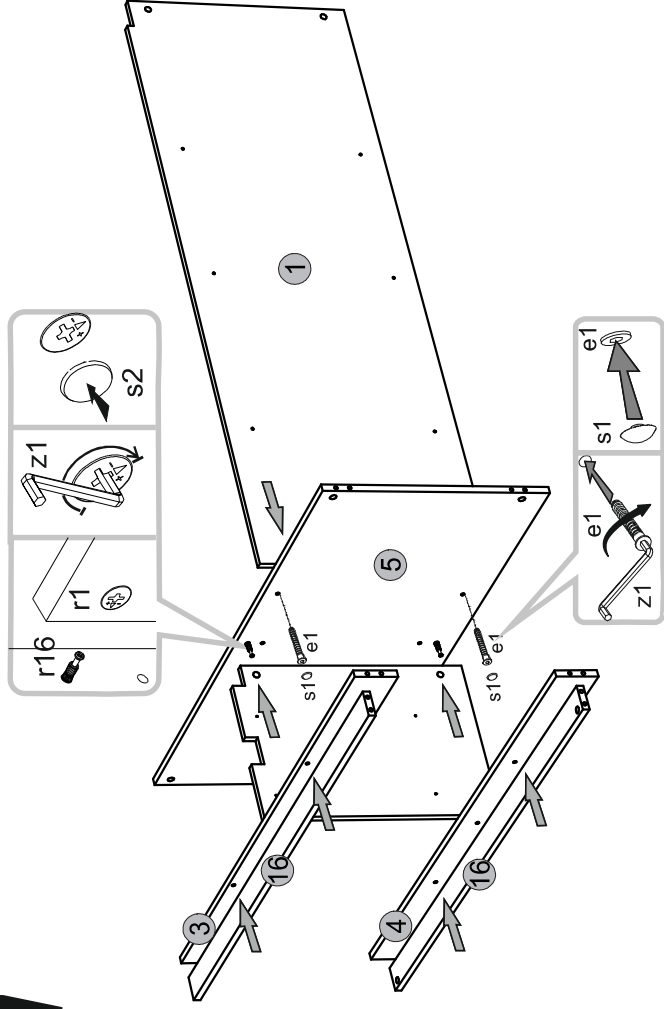


6

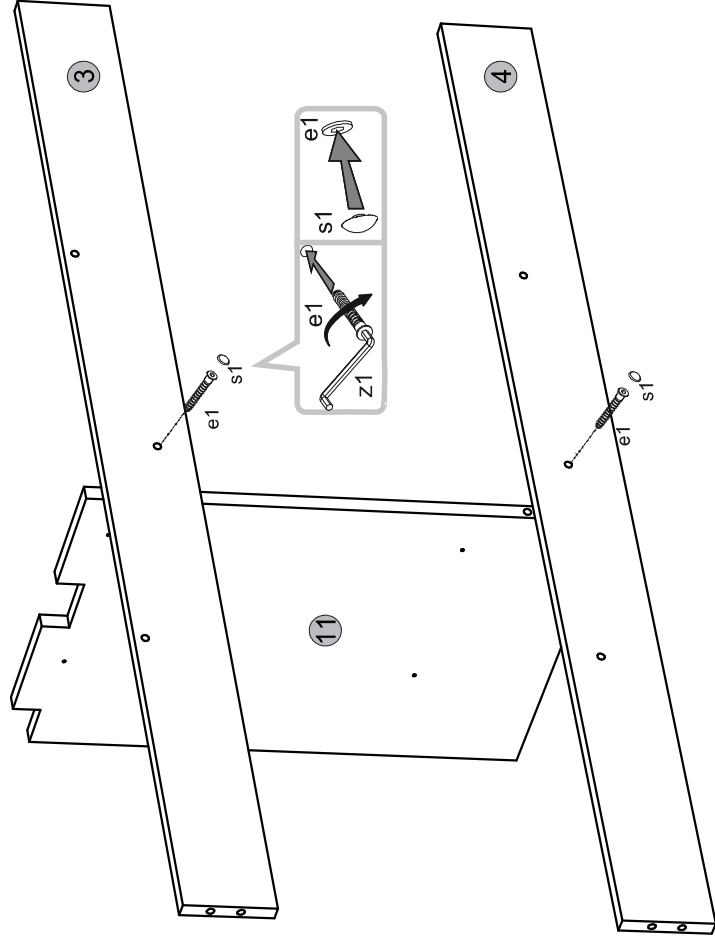


8

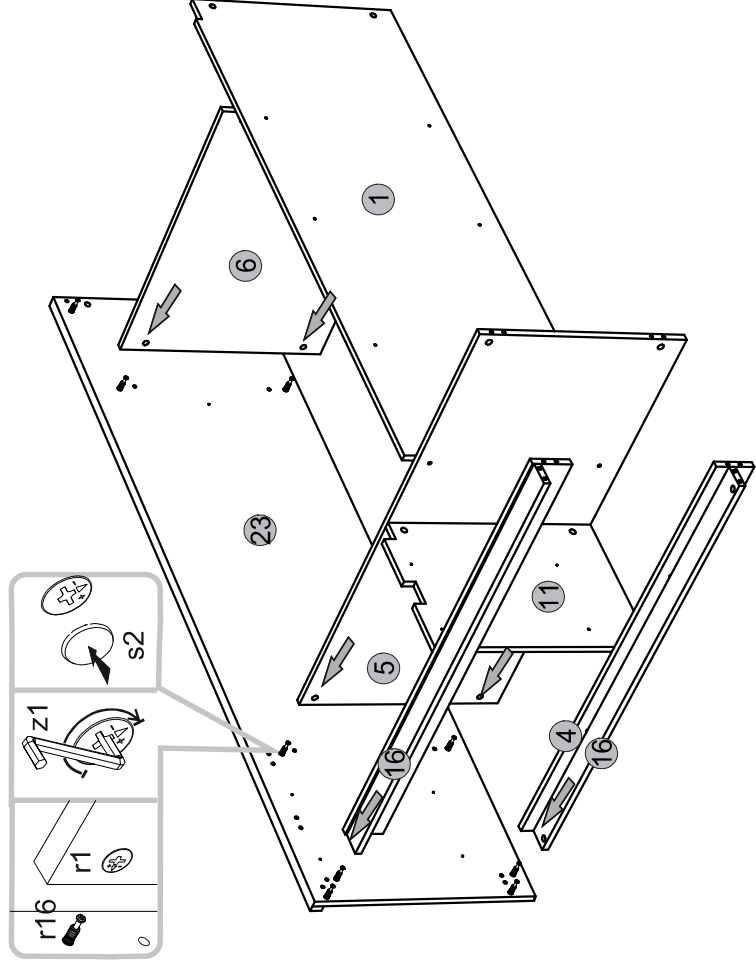


9

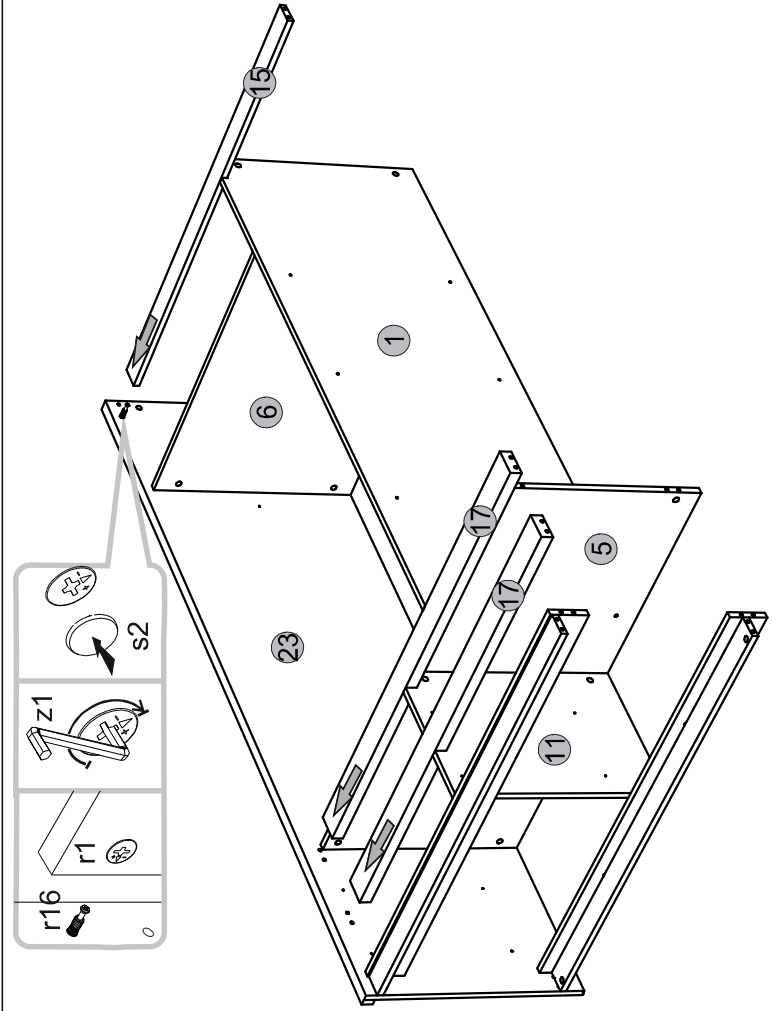


11

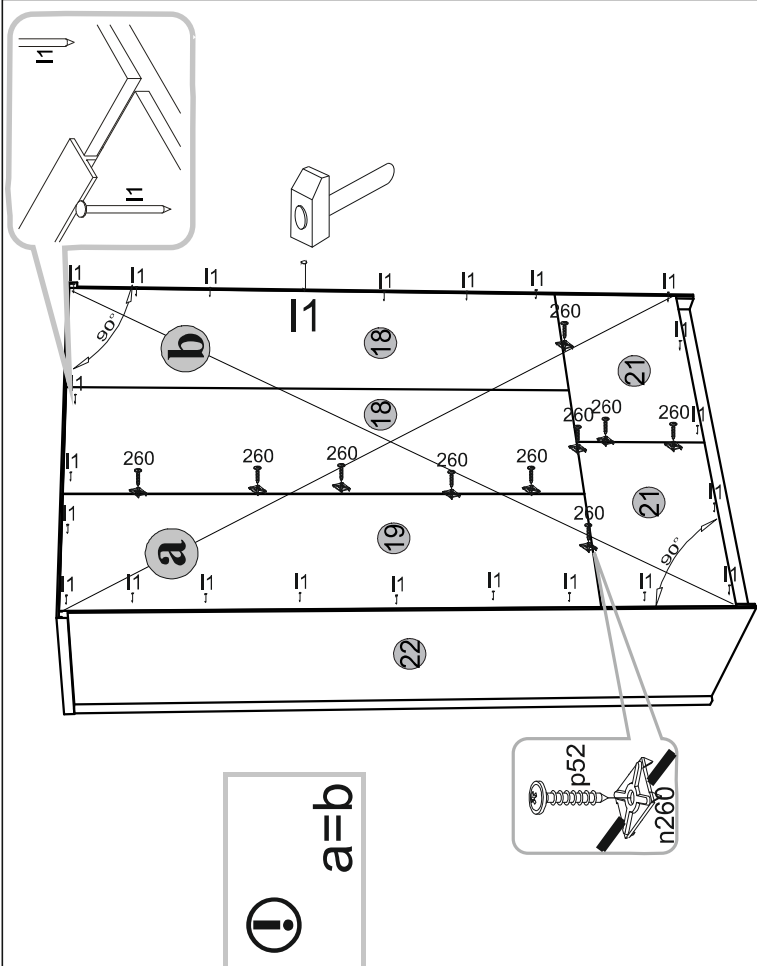


10

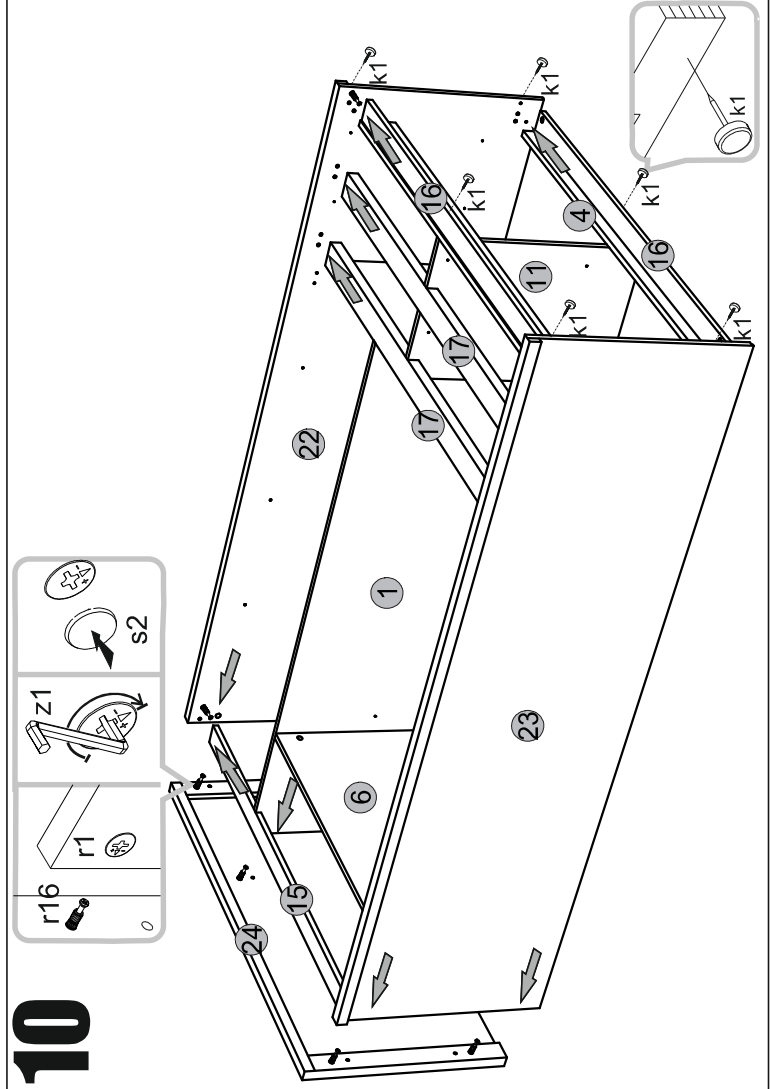

12

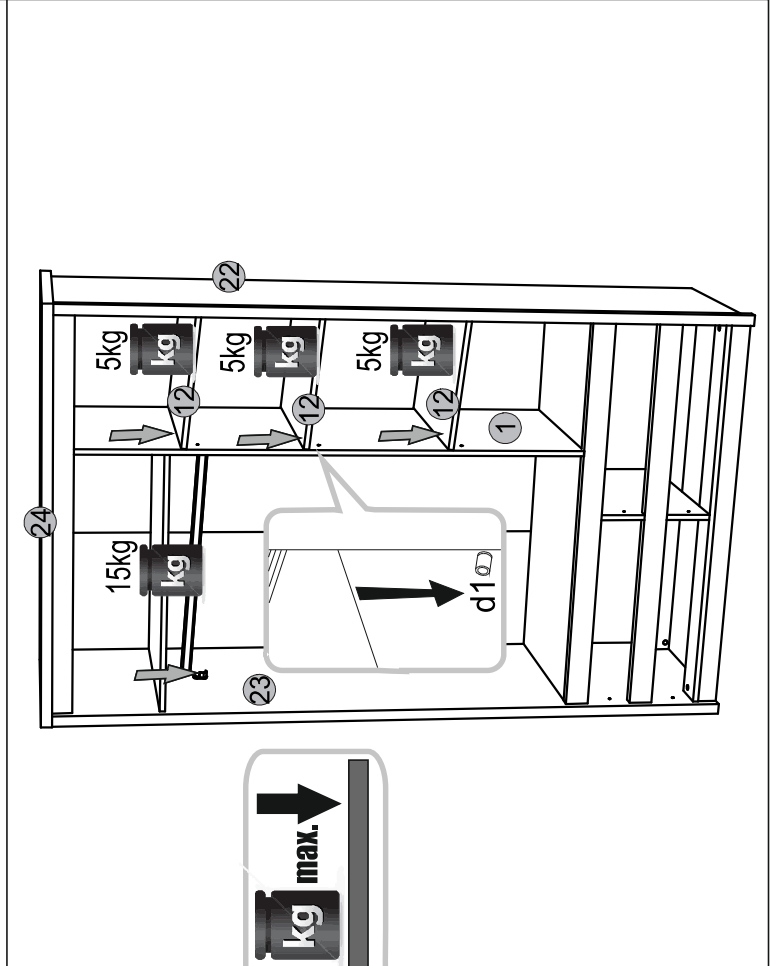

13

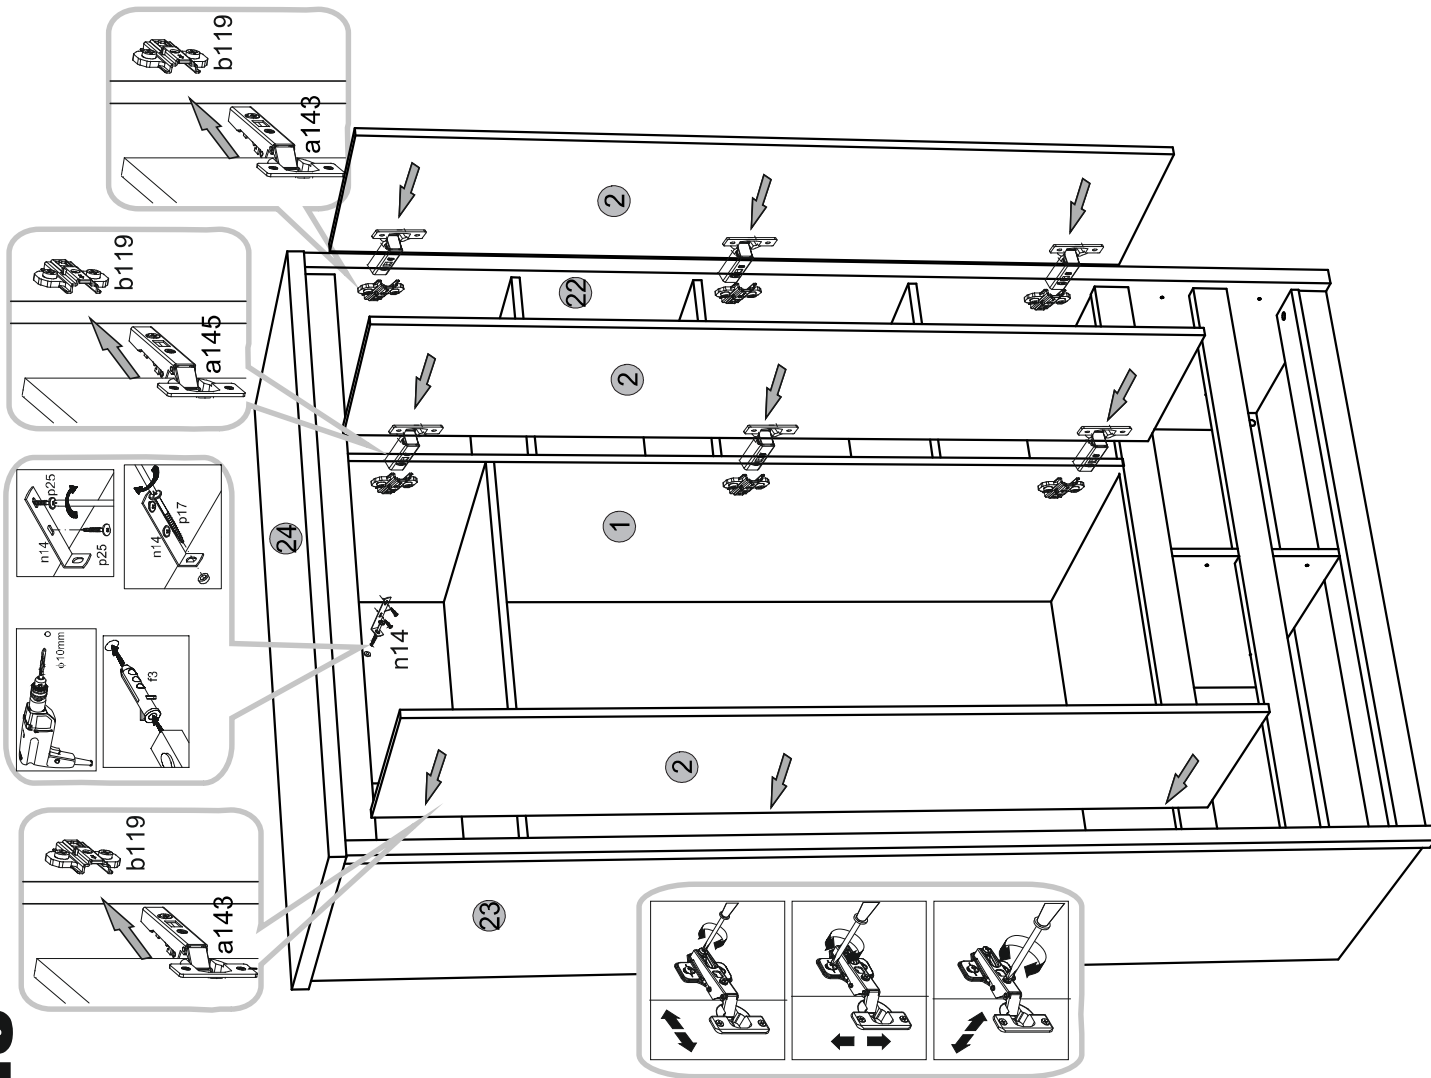

14

