

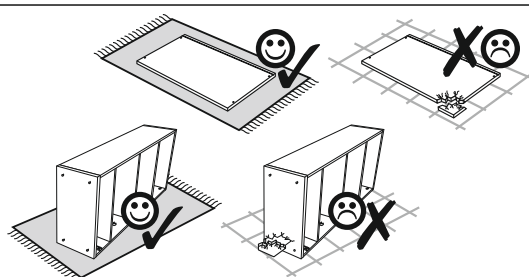


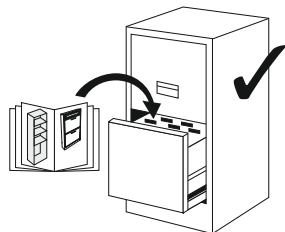

Instalation manual


LORA: KOM_1D1K

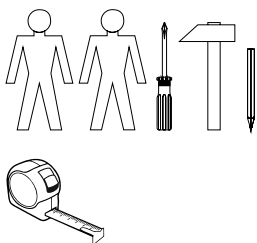

460 mm












280 mm

900 mm

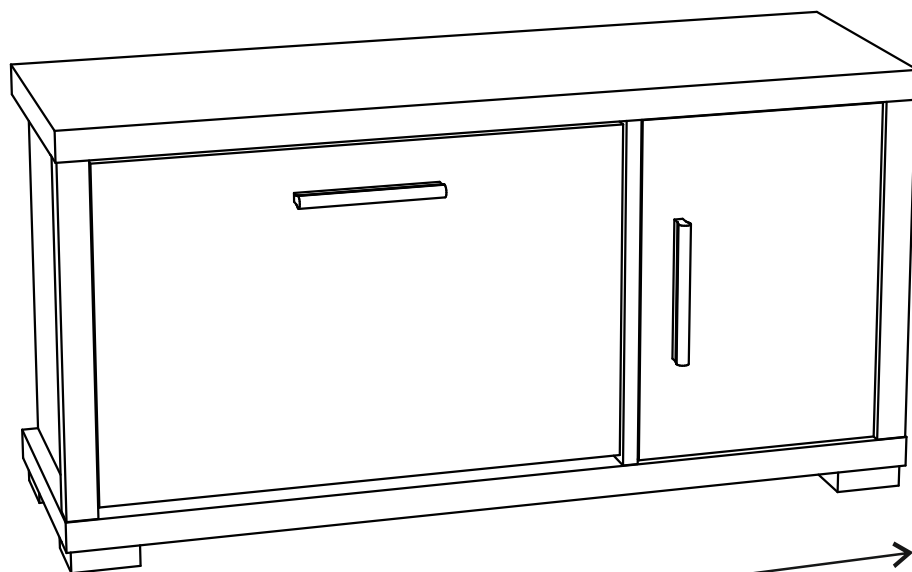

12x r16	10x s2	1x y1	1x z1	
18x p25 φ3.5x16 mm	4x p9 φ4x30 mm	2x a1 K16	2x b1	12x r1 φ15x12mm #16
2x J1 M4x20 mm	4x k150	1x m9	1x m9	8x p6 φ4x35 mm
2x c235	4x d1 φ6x17 mm	4x e2 φ6.3x13 mm	12x f1 φ8x30 mm	20x l1



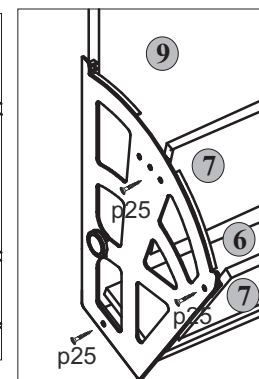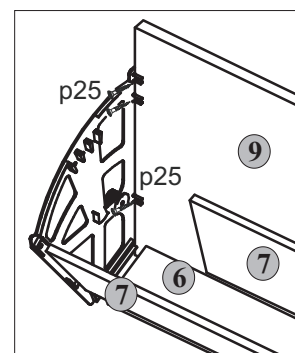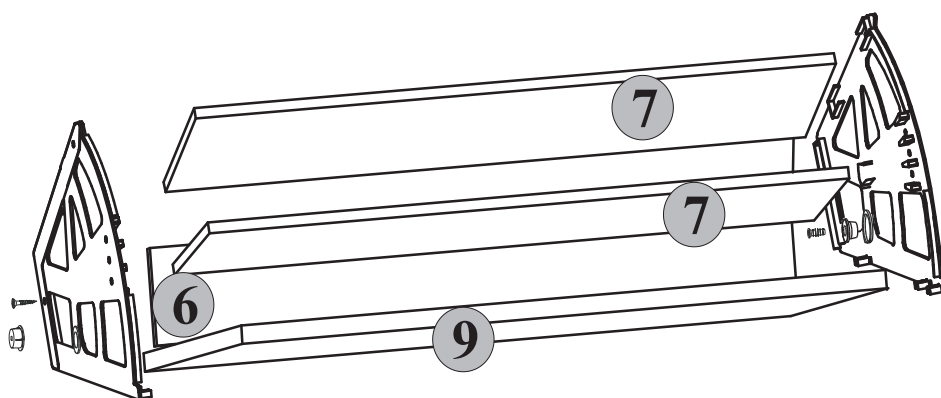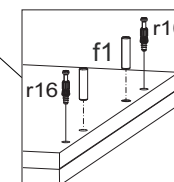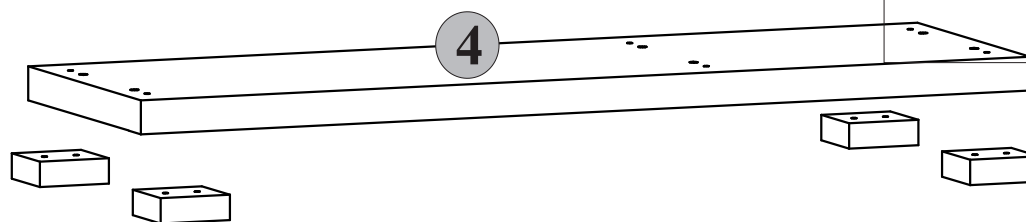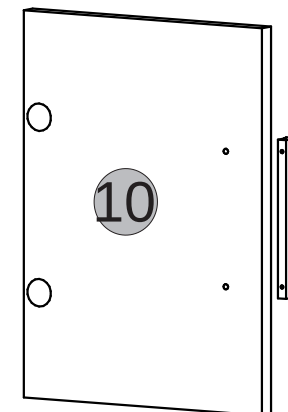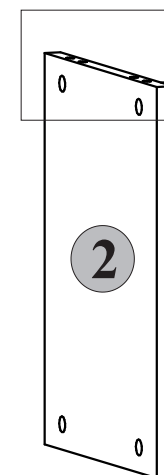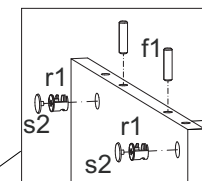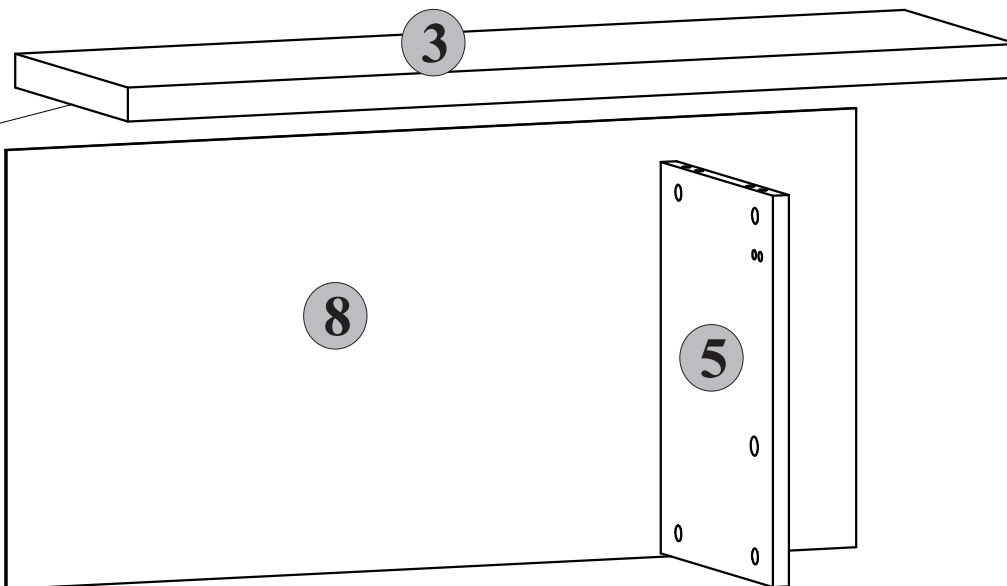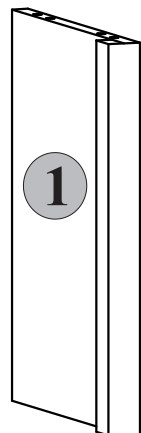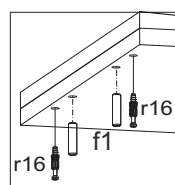

No					
1	I-106	370	281	16/32	1
2	I-107	370	281	16/32	1
3	I-205	900	282	16/32	1
4	I-206	900	282	16/32	1
5	I-108	370	281	16	1
6	I-306	540	85	10	1
7	I-305	540	140	10	2
8	I-605	860	415	3	1
9	I-007	355	546	16	1
10	I-008	366	263	16	1