
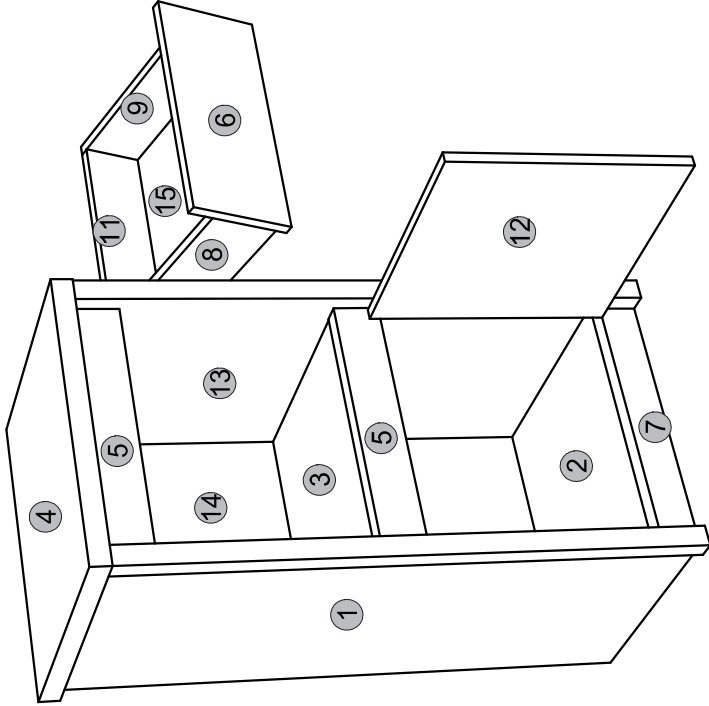
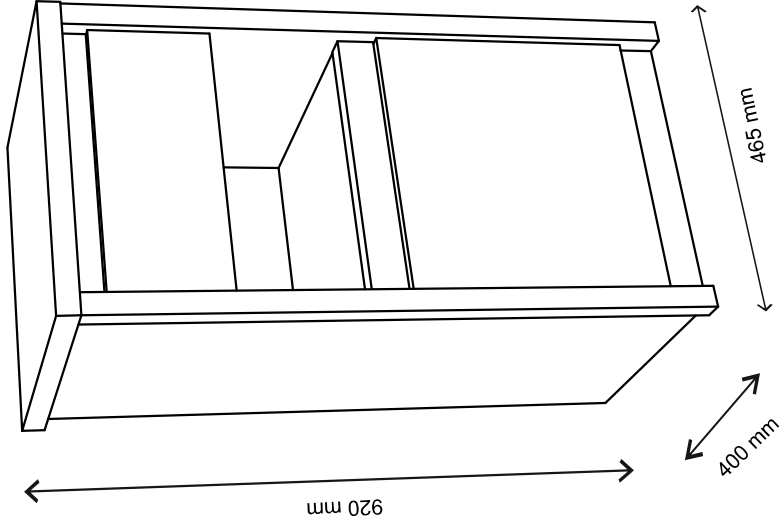
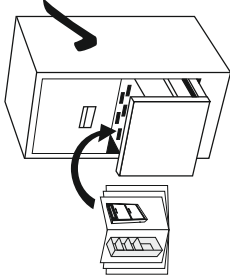
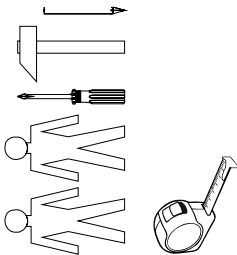
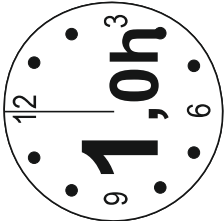



Installation manual

NORTON: KOM_1D1S_HW

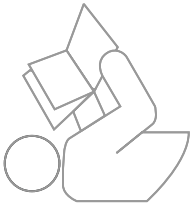


Element symbol	Dimensions			Code	Package
1	884	398	16/32	1 N-011	1/1
2	398	369	16	1 N-001	1/1
3	398	339	16	1 N-002	1/1
4	464	400	16/32/32	1 N-012	1/1
5	70	398	30	2 N-013	1/1
6	170	392	16	1 N-008	1/1
7	60	398	16	1 N-009	1/1
8	350	110	16	1 N-004	1/1
9	350	110	16	1 N-005	1/1
10	341	110	16	1 N-006	1/1
11	341	110	16	1 N-007	1/1
12	376	392	16	1 N-003	1/1
13	884	398	16/32	1 N-010	1/1
14	849	416	3	1 N-014	1/1
15	355	332	3	1 N-015	1/1


4x		e1	4x		s1	16x		p25	1x		z1	4x		k1	40x		l1	2x		p21
2x		b119	2x		a143	14x		s2	14x		r1	14x		r16	1x		L-350	26x		f1




3

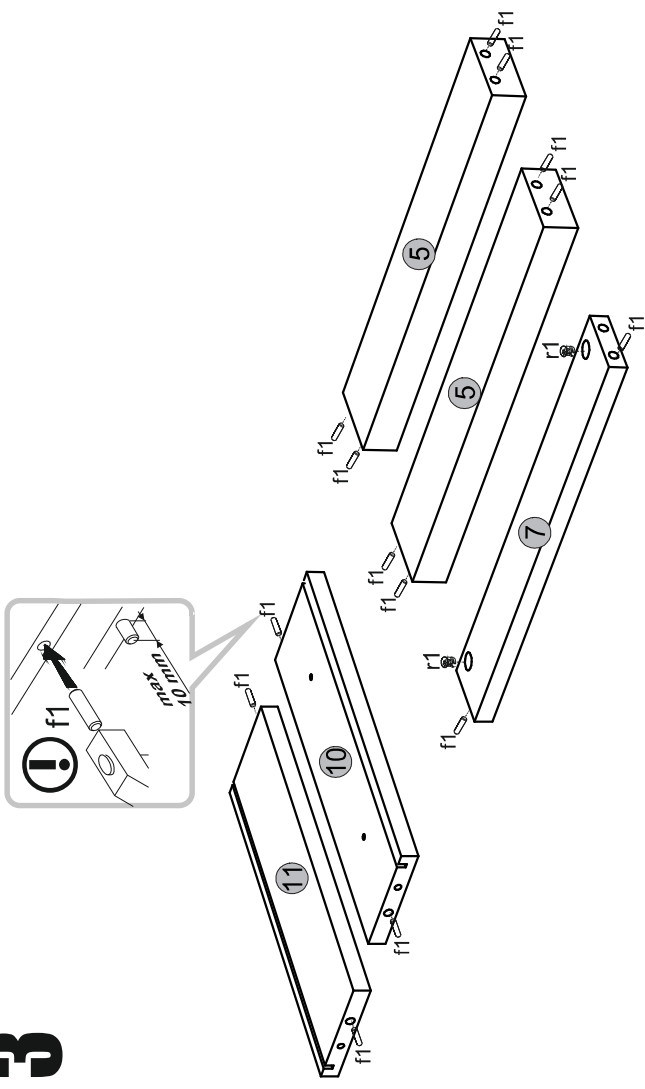


4

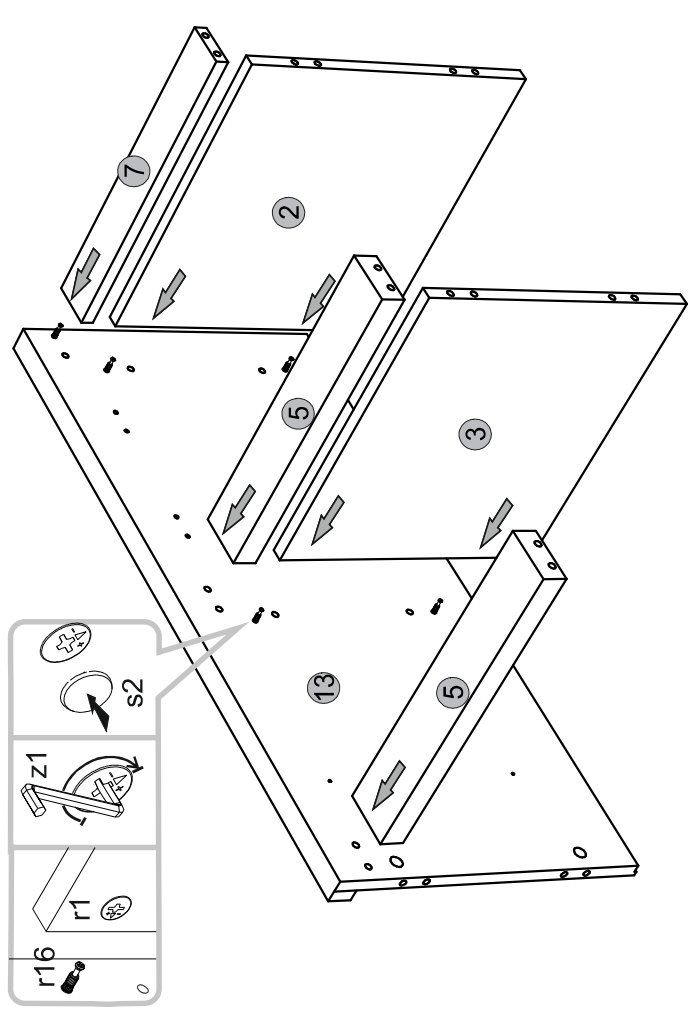


1

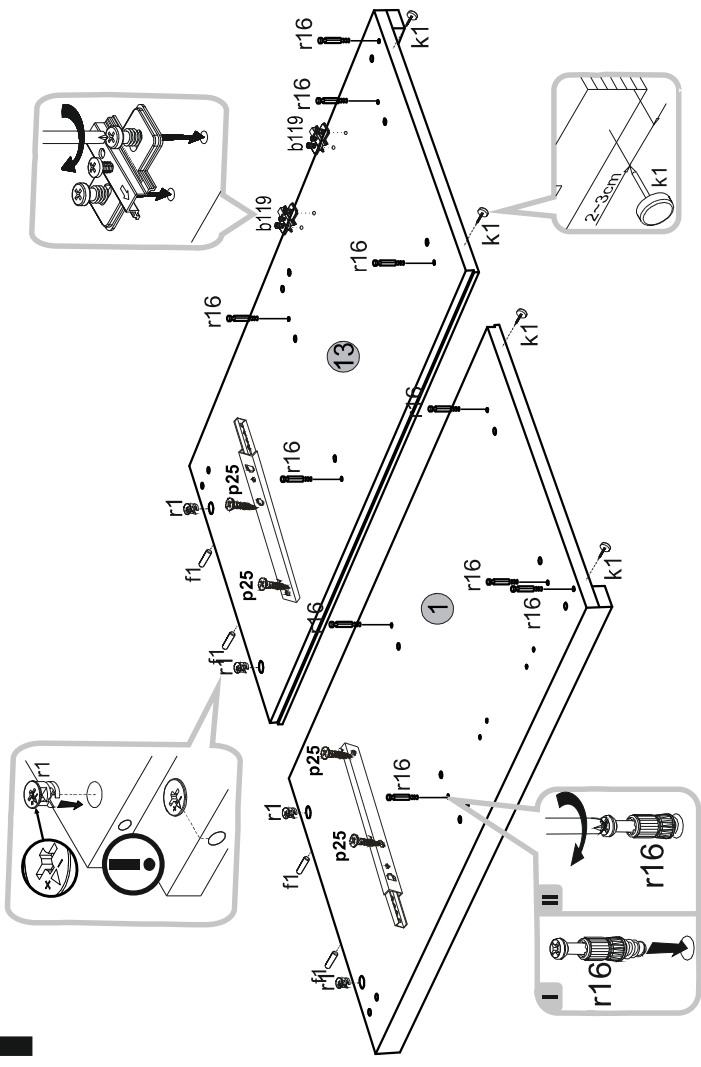


2

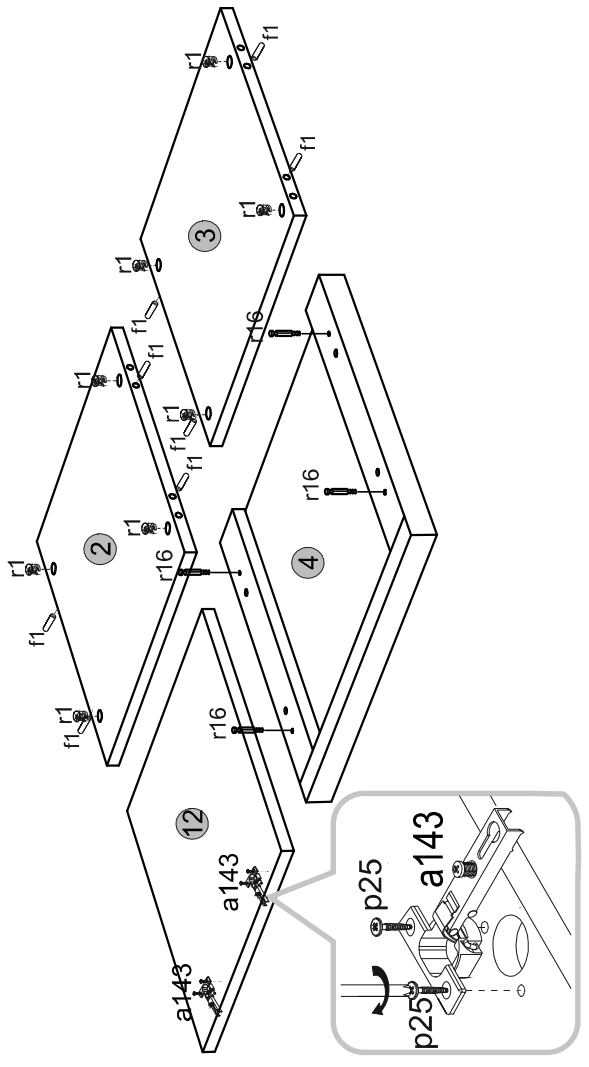


5

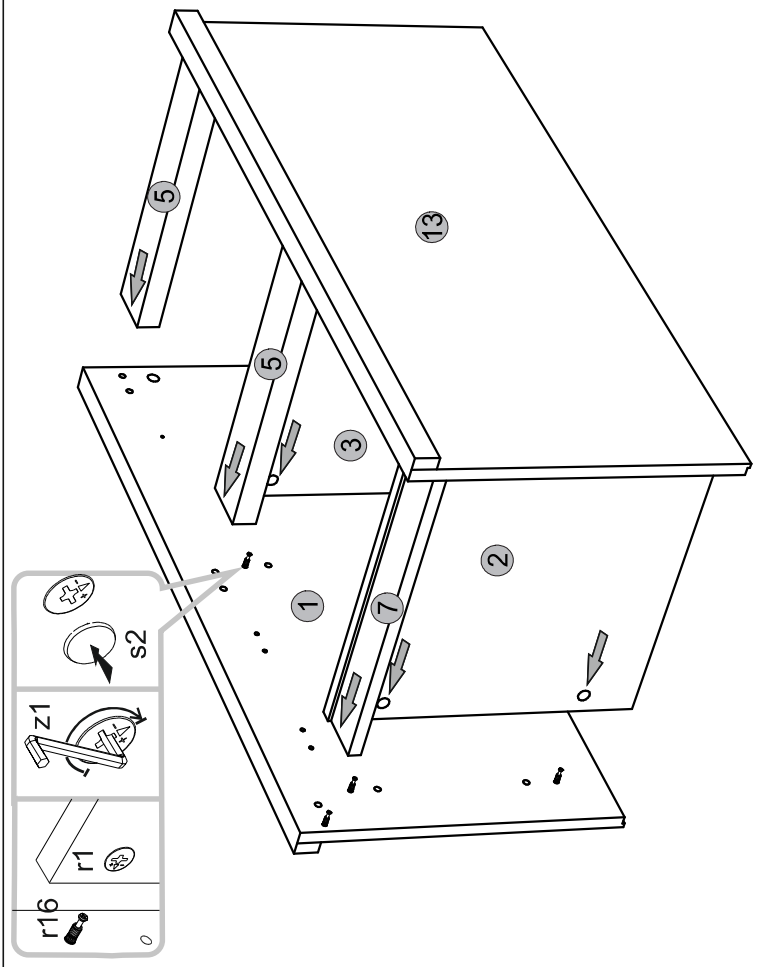

7

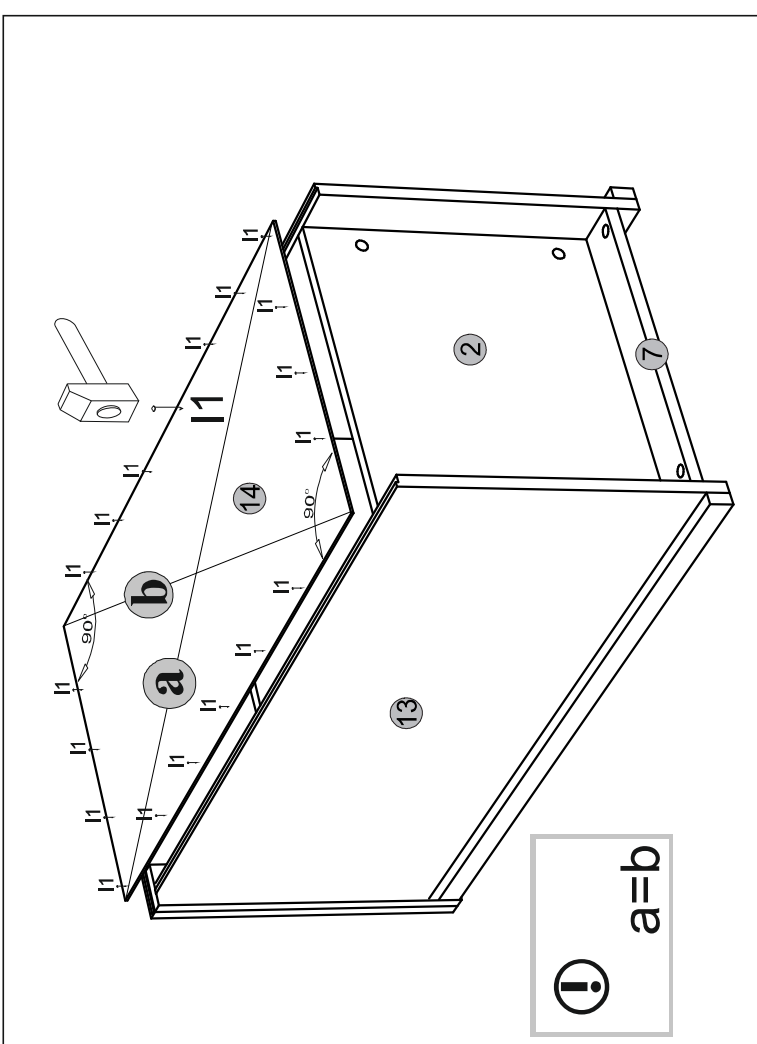

6

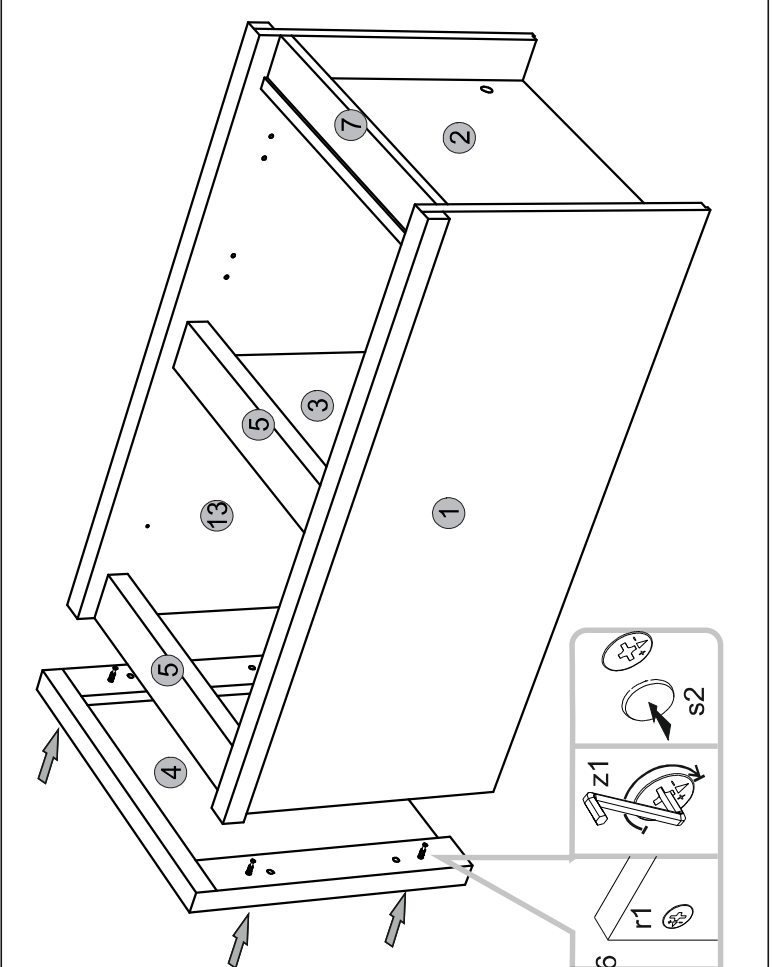

8

